

Genus[®] | Spectra


LAMP REPLACEMENT AND MAINTENANCE GUIDE

LAMP REPLACEMENT

1. Isolate/disconnect the unit from the electrical supply before handling. Removing lamps from the unit prior to disconnection may cause the circuitry of the unit to switch to safety mode. See reset instructions. Open the front screen by lifting up and open to its full extent. Lamps may be warm; it is advisable to wait a few minutes until cool.
2. Press the red button on the quick release lamp holder and pull the lamp out and away making sure to carefully disengage from the lamp clip at the opposite end. See diagram.
3. To install new lamps, position the lamp base flush against lamp holder so the 4 pins are aligned with the slots and click securely into place. Push the lamp into the clip at the opposite end.
4. Close the screen and reconnect the electrical supply.



WARNING: LAMPS CONTAIN MERCURY. DISPOSE OF ACCORDING TO LOCAL, STATE OR FEDERAL LAW. SEE WWW.LAMPRECYCLE.ORG

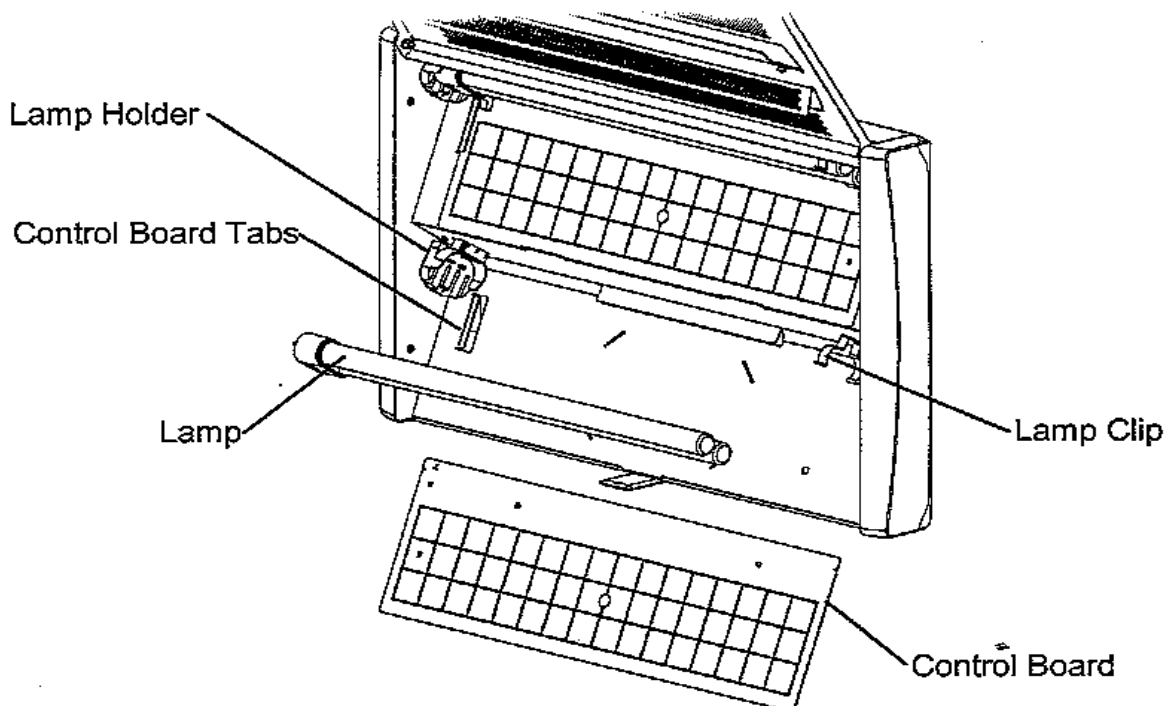

NOTE: ISOLATE/DISCONNECT THE UNIT FROM THE ELECTRICAL SUPPLY BEFORE HANDLING. REMOVING LAMPS FROM THE UNIT PRIOR TO DISCONNECTION MAY CAUSE THE INTERNAL CIRCUITRY TO SWITCH TO SAFETY MODE.

MAINTENANCE

If either or both lamps glow dark purple (indicating a burned out lamp):
Follow the procedure for replacing lamps.

If both lamps are not glowing (no illumination at all):
Follow the procedure for resetting the lamp circuit.

The electronic circuit in the unit has a safety mode which temporarily shuts down the unit when an electrical surge occurs; this feature protects service personnel and the integrity of the unit.

Units in shut down safety mode may appear to be defective or may give the false impression that the lamps are burned out.

Common causes;

1. Lamps are replaced without first disconnecting the unit from the electrical supply.
2. Unit is exposed to extreme wet conditions.
3. Electrical supply power surge occurred in the building.

The unit must be reset to resume normal operation.

RESETTING THE LAMP CIRCUIT

If lamps do not light after replacement, reset the circuit as follows:

Isolate/disconnect the unit from the electrical supply.

Wait for 15 seconds, a faint glimmer may occur in either or both lamps indicating the circuit has reset.

Reconnect the unit to the electrical supply.

If lamps are still not illuminated, please contact your local distributor.

Brandenburg

29 Navigation Drive, Hurst Business Park,
Brierley Hill, West Midlands, DY5 1UT, United Kingdom
Tel: +44 (0)138 447 2900 Fax: +44 (0)138 447 2911
www.b-one.com / www.biting-insects.com
For technical support email technical@b-one.com